 


## PORCELAIN

Decked out in colours. Dishwasher-safe without firing. Just paint, leave to dry, done. Water-based, odourless and non-fading. Dishwasher-safe after 3 days drying time (max. 50 °C). To speed up the drying process or in combination with the Marabu Porcelain & Glas Painter, the paint can also be fired for 30 minutes at 160 °C.



**11050 039** 15 ml jar

**11050 005** 50 ml jar

**11050 039 00000**  
Filling Porcelain  
15 ml, 130 x 15 ml  
jars, 6 x cleaner  
à 50 ml



4 007751 473936

**11050 005 00000**  
Filling Porcelain  
50 ml, 48 x 50  
ml jars, 6 x 50 ml  
cleaner



4 007751 473967



in 15 ml and \* also in 50 ml available

### TIP

Porcelain Medium for serviette technique on decorative objects made of porcelain, ceramics, glass on page 108



**11050 000 00087**

Porcelain starter set: 6 x 15 ml  
(220, 125, 057, 158, 070, 073),  
1 x brush Marabu Universal flat size 8  
(FSC® certified), 1 x instructions



4 007751 473790

### TIP

Note the following to ensure you can enjoy your glass and porcelain painting for a long time:

- Pre-cleaning: Thoroughly clean the porcelain with washing-up liquid or an abrasive cleaner and a sponge before painting. Then rub off any finger prints with Marabu Cleaner or white spirit.
- Do not pre-clean the dishes in the dishwasher.
- Cutting surfaces and drinking edges should not be painted as abrasion from cutlery can damage the painting.
- Arcopal/Pyrex dishes will not be dishwasher-safe after painting.
- Porcelain, Glas and Porcelain & Glas Painter are also ideal for combining: Simply fire in the oven after drying (approx. 4 hours) at 160 °C for 30 minutes. Afterwards the dishes will be dishwasher-safe up to max. 50 °C.

